#### QUICK REFERENCE GUIDE

#### STEP 1: TURN THE SYSTEM ON

#### Turning ON the PCS-1/PCS-11

- Make sure the power switch on the side of the unit is ON.
- If the power indicator light is orange, press the power button on the Remote Commander® Controller.
- If after 6 seconds you do not see the main menu, make sure the TV monitor is on and the correct input of the TV is selected.

## STEP 2: STARTING THE MEETING

### **Using Phone Book**

- Use the navigation buttons on the Remote Commander Controller to select the PHONE BOOK, then press ENTER.
- Select the person you want to call and press ENTER.
- Select "Dial" and press ENTER again.

#### **Using Manual Dial**

- Using the number keys, begin entering the number you wish to call. The "Manual Dial" screen will automatically be displayed.
- Select the Line interface (IP or ISDN).

#### STEP 3: ENDING THE MEETING

#### **Disconnecting**

- To disconnect, press the CONNECT/DISCONNECT button on the Remote Commander Controller.
- Select the OK to disconnect and end the meeting.

## STEP 4: POWERING OFF

## **Powering Off the Unit**

- Press the power button to put the unit in standby mode.
- To completely power down the system, set the switch on the side of the unit to the OFF position.






Main Menu



Phone Book

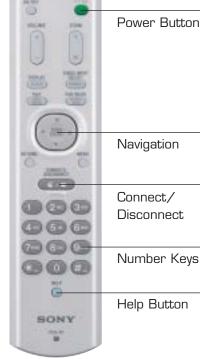

Remote Commander Controller

# QUICK REFERENCE GUIDE

Mic ON and OFF (similar to "Mute")	VOLUME ZOOM	Standby Power: Turns off camera, puts system in standby mode
Increase or decrease the sound level		Zoom the camera in or out on an object or person
Switch between DSB,	ORSPLAN SELECT SELECT	Select which video source to view
Whiteboard and Still Image	FAA/NEAR (NEW)	Select which site to view in full screen
Select the Picture-in-Picture Position	(3 <u>m</u>	Directional control for camera angle and navigating the menus
Exit out of any menu	CONNECT/ DISCONNECT	Access the menu while in a call
Connect or disconnect a call		
	4 · 5 · 6 · · · · · · · · · · · · · · · ·	Dial pad for making entries. During a conference, press 1 – 6 to activate a camera preset, or hold down any number 1 – 6 for three seconds to save a camera preset
Use to activate dial tones (DTMF)	* 9 #	Use to insert a . (period) in an IP address (For example, 192.168.1.2)
Press twice to view call status	SONY	Press to access further helpful information
	PCS-R1	